


### **DRYER FRONT PANEL AND DOOR PARTS**

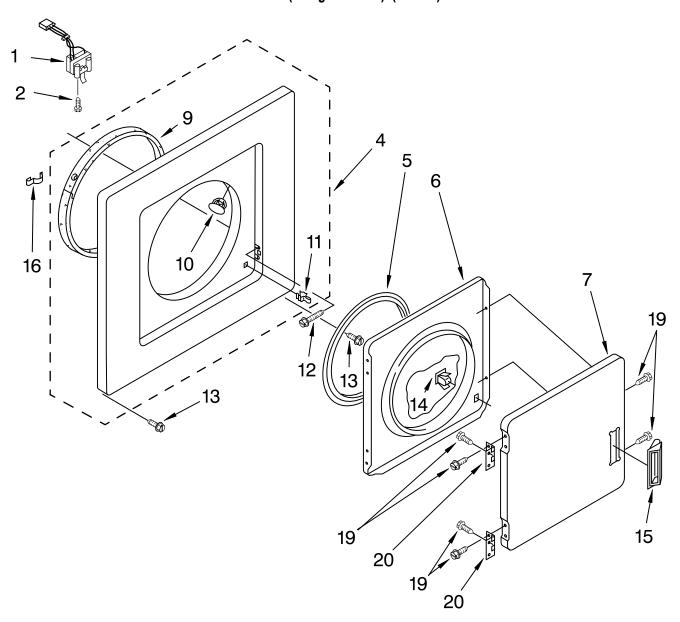


Illus.	Part		Illus.	Part		Illus.	Part	
No.	No.	DESCRIPTION	No.	No.	DESCRIPTION	No.	No.	DESCRIPTION
1	3406108	Door Switch	7		Door, Front	13	343641	Screw, 10-16 x 1/2
2	697773	Screw, 6-20 x 7/8		348205	White	14	3389441	Catch, Door
4		Panel, Front		3978598	Biscuit	15		Handle, Door
	692619	White	9	8066123	Bearing & Seal		686711	White
	3978587	Biscuit	10	685203	Clip, Felt		3978592	
5	3390734	Seal, Door			Pad (2)	16		Support Protector
6	695656	Door, Rear	11		Strike, Panel	19		Screw, 8-18 x 3/8
			12	3390663	Screw, 10-16 x 1/2	20	348023	Hinge & Pin,
								Door (2)

#### **DRYER CABINET AND MOTOR PARTS**

#### **DRYER CABINET AND MOTOR PARTS**

Illus.	Part		Illus.	Part		Illus.	Part	
No.	No.	DESCRIPTION	No.	No.	DESCRIPTION	No.	No.	DESCRIPTION
1	660658	Clamp, Motor Mounting (2)	21	8066051	Pulley, Motor (60 Hz.)	31		Closure, Control Area
2	8066068	Motor, Main Drive	22	3394332	Idler & Slide		692781	
		(60 Hz.)			Assembly		3978599	
3	3405028		23	692771	Nut, Idler	32	354975	Screw & Washer (3)
5		Bracket, Motor			Bracket To Base			(Lid Latch
6		Panel, Rear	24	3399633	Base, Dryer			Mounting)
7		Screw, 10-16 x 1/2	25	692400	Nut, Push-In	33	693304	
8	3394228	Cover, Terminal	26	692926	Cove, Transition			(Transition Panel
		Block			Panel (Black)			To Closure)
10		Panel, Side (L.H.)	27		Panel, Transition	34	697776	,
	3402293			692933	White			(10–32 x 5/8)
	3978589			3978591	Biscuit	35		Screw, 10-16 x 3/8
14		Elbow, Upper	28	692641	Top, Dryer	36	661606	
15	3394083	Clip, Front	29		Panel, Side (R.H.)			Start (Automatic
		Panel (2)		3402287	White			Washer)
16		Clip, Ground		3978590		37	357030	Clamp, Capacitor
17		Elbow, Lower	30	693145	Latch, Lid	38	343641	, ·
20	8066064	Belt, Drive						Mounting
						41		Edge, Protector
			l			44	90296	Clip

# DRYER BULKHEAD PARTS For Models: LTG5243DQ3, LTG5243DT3 (Designer White) (Pisquit)

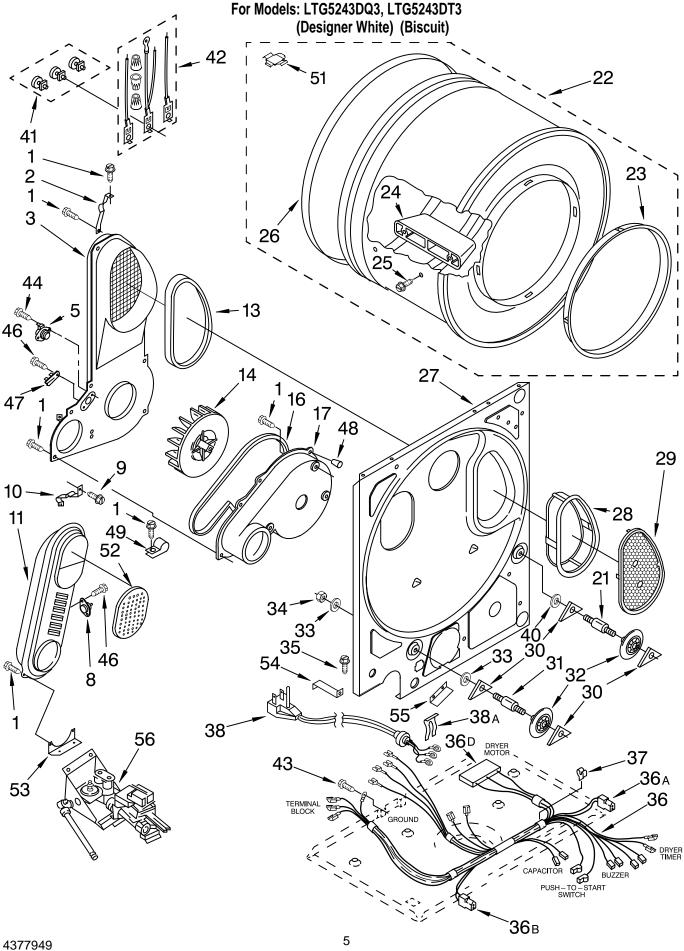


#### **DRYER BULKHEAD PARTS**

Illus.	Part		Illus.	Part		Illus.	Part	
No.	No.	DESCRIPTION	No.	No.	DESCRIPTION	No.	No.	DESCRIPTION
1		Screw, 10-16 x 1/2	27	697540	Bulkhead	38		Cord, Power
2	3395396	Clip, Air Duct	28	348399	Lint Screen	38A	694415	Strain Relief,
_		To Bulkhead	29	685273	Cover, Lint			Power Cord
3					Screen Outlet	40		Washer, Support
5	3398128	Thermostat,	30	690997	Tri-Ring (4)	41	279393	Screw Kit
_		Internal Bias	31	3399506	Shaft, Drum			(For Terminal
8	3403140	Thermostat,			Roller (L.H.)			Block)
		Heater Box	32		Roller, Support (2)	42	279318	
_		205°F (96C)	33	348197				& Brass (3)
9		Screw, 8–18 x 5/8	34		Nut, 3/8-16 (2)			(Includes Illus. 41)
10	3398161	Clip, Heater Box	35		Screw, 10-16 x 3/8	43		Screw, 10-32 x 1/2
		To Bulkhead	36	3396657	Harness, Main	44		Screw, 8-18 x 1/2
11	697269				Dryer Wiring	46		Screw, 8-18 X 3/8
13	339956	Seal, Air Duct			(Includes Illus.	47		Fuse, Thermal
		To Bulkhead			36A, 36B, 36D)	48		Cap, Screw
14		Wheel, Blower	36A	717252		49	255563	Clip, Strain
16	8066094	Seal, Fan			Terminal (2-Way)			Relief
		Scroll			(Connects With	51		Drum, Hole Plug
17		Fan Scroll			Door Switch	52		Cover, Manifold
21	3399507				Harness)	53	347455	• • •
		Roller (R.H.)	36B	697780				Heater Box
22		Drum, Dryer			(Gas Valve)	54	3387208	Support,
23		Ring, Bearing	36D	3395683				Corner Gas
24		Baffle, Drum (3)			Multi-Terminal	55	697571	•
25		Screw, 11-16 x 3/4			(Connects With	56	3402856	
26	345648	Seal, Drum Rear			Dryer Motor)			(Refer to page 19
			37	693141	Clip, Wiring			For Complete
			l		Harness (3)	l		Breakdown)


## DRYER SUPPORT AND WASHER PARTS For Models: LTG5243DQ3, LTG5243DT3

(Designer White) (Biscuit)

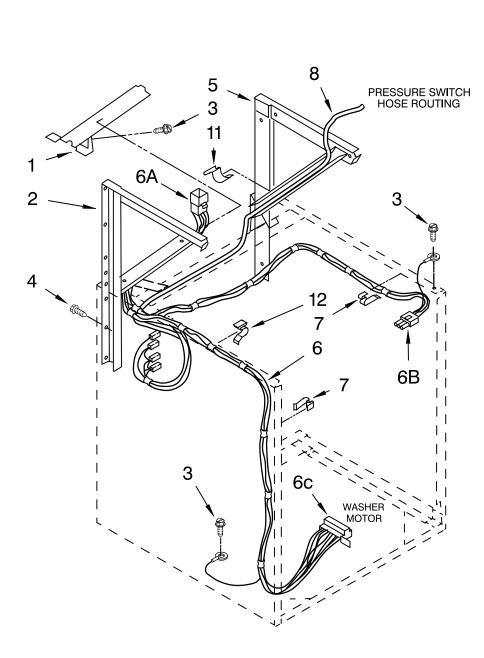

Illus.	Part	
No.	No.	DESCRIPTION
4	004004	Carran Channal
1 2	694304 692647	Cover, Channel Support,
2	092047	Dryer (L.H.)
3 4	343641	Screw, 10–16 x 1/2
4	3400000	Screw,
		10-24 x 3/8 (8)
		(Washer Cabinet To Dryer Supports)
5	692646	Support,
O	002010	Dryer (R.H.)
6	3954108	Harness, Lower
		(Automatic)
		(Includes Illus.
6A	696074	6A, 6B & 6C) Plug, Terminal
O/A	030074	(12–Way)
		(Connects With
		Automatic Console
0.0	00000	Harness)
6B	62889	Plug, Terminal (3–Way)
		(Connects With
		Automatic Lid
		Switch Harness)
6C	62505	
		(Connects With Automatic Washer
		Motor)
7	3347812	Clip, Wiring
		Harness (4)
8	8066080	Hose, Pressure
11	90016	Switch
11	90016	Clip, Pressure Switch Hose (2)
12	693141	Clip, Harness
		•


## WASHER TOP AND LID PARTS For Models: LTG5243DQ3, LTG5243DT3

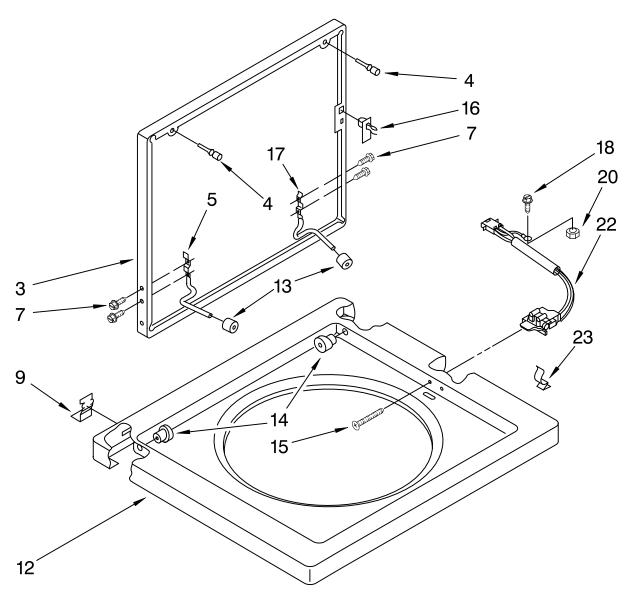

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
3	0000040	Lid	12		Тор	16	358684	Strike, Lid
	3398843 3398847			384693 3978593		17	384459	Switch Hinge, Lid (R.H.)
4		Bumper, Lid (2)	13	19119	Bumper, Lid	18	3400030	Screw, 10-24 x 1/2
5		Hinge, Lid (L.H.)			Hinge (2)	20	3400901	Nut, Ground
7	3351355	Screw, Lid	14	21258	Bearing, Lid			Screw
_		Hinge Mounting (4)			Hinge (2)	22		Switch, Lid
9	692985	Clip, Spring (2)	15	3356311	Screw & Washer,	23	90016	Clip, Harness
		(Top To Cabinet)			Lid Switch			Routing
					Shield (2)			_

### WASHER CABINET PARTS For Models: LTG5243DQ3, LTG5243DT3


(Designer White) (Biscuit)

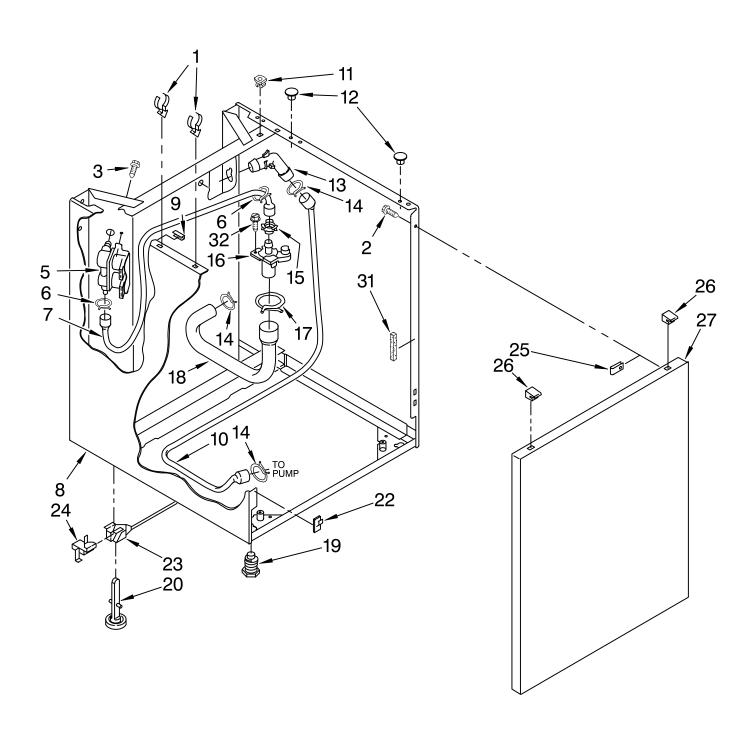


### WASHER CABINET PARTS For Models: LTG5243DQ3, LTG5243DT3

Illus. No.	Part No.	DESCRIPTION
1 2 3	356746 343641 9740848	Clip, Condenser Screw, 10–16 x 1/2 Screw, Mixing Valve Mounting
5	3952163	Valve, Water Mixing
6 7	370451 692699	Clamp, Hose Hose, Water Inlet (Siphon Break To Mixing Valve)
8	696013	Cabinet White
9 10 11 12	3978594 3390046 696710 692400 660975	Biscuit Protector, Edge Hose, Drain Nut, Push–In (2) Plug, Top To Cabinet
13 14 15 16 17 18	356739 370445 356471 356363 272861 696394	Connector, Hose Clamp, Hose Cap, Siphon Break Siphon Break Clamp, Hose Hose, Water Inlet (Siphon Break To Tub Ring)
19 20 22 23 24	367594 358594 3394083 358652 359364	Foot, Front (2) Foot, Rear (2) Clip, Front Panel Link, Leveling Clip, Leveling
25 26 27	98234 345670	Mechanism (2) Clip, Ground Lock, Top (2) Panel, Front
31 32	692628 3978596 3350013 64247	White Biscuit Foam (2) Screw, 10–16 x 1/2


#### BRAKE, CLUTCH, GEARCASE, MOTOR AND PUMP PARTS

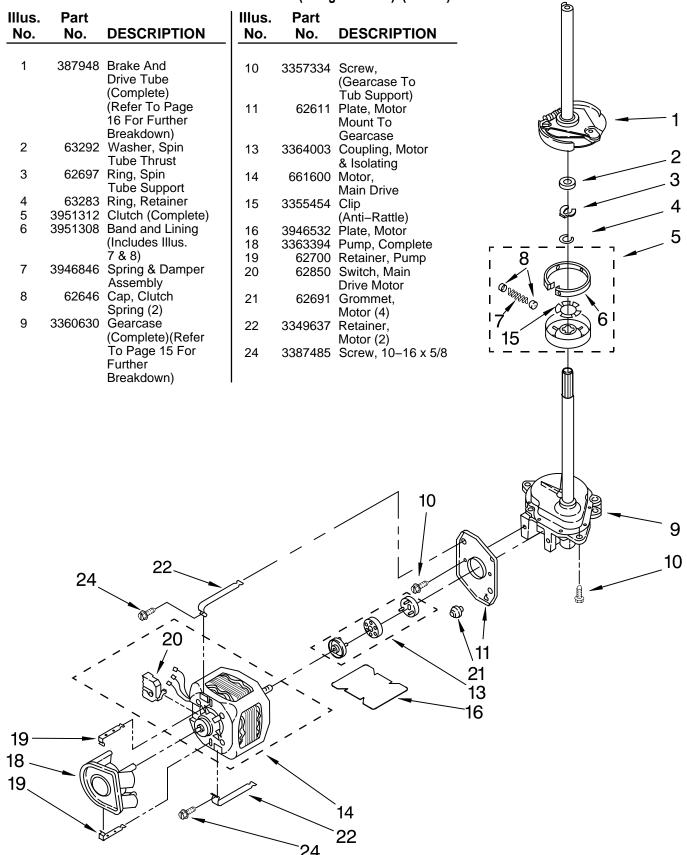

#### **MACHINE BASE PARTS**

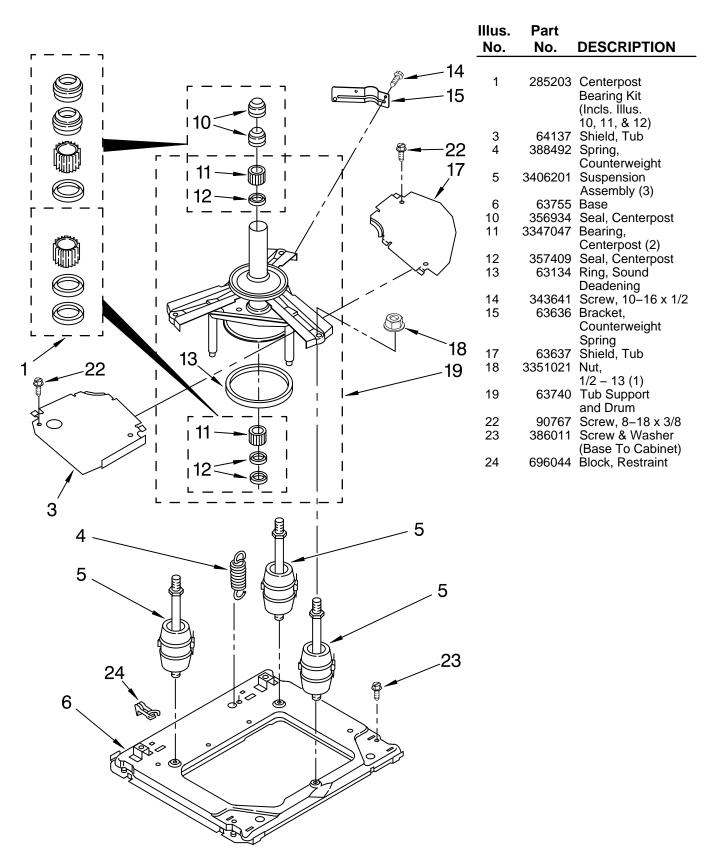


#### **TUB AND BASKET PARTS**

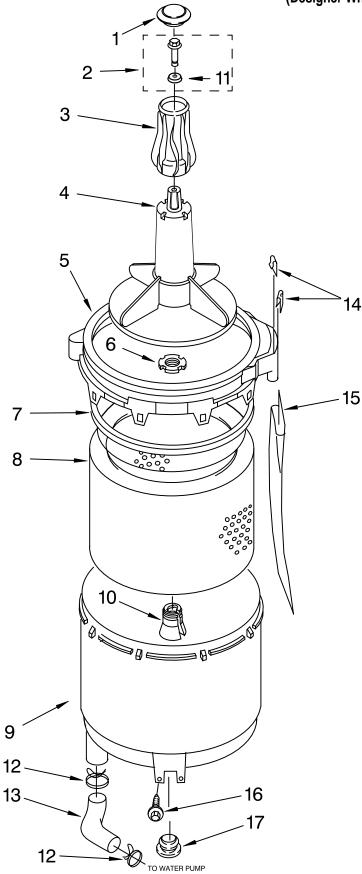


Illus. No.	Part No.	DESCRIPTION
1	3355758	Cap, Agitator
2	358237	
3	63840	Filter, Agitator
4	3349098	
5	64175	Tub Ring &
		Gasket (Includes
•	04000	Illus. 7, 14 & 15)
6 7	21366	
/	3359587	
0	3351985	Tub Ring
8 9		
10	8066081	
10	389140	Block, Basket Drive
11	3949550	Washer
12	371502	Clamp, Hose
13	386929	
		To Pump
14	352155	
15	356398	
		Drain Off
16	357640	
17	383727	(Tub Mounting) Gasket, Centerpost

### WASHER WATER SYSTEM PARTS For Models: LTG5243DQ3, LTG5243DT3

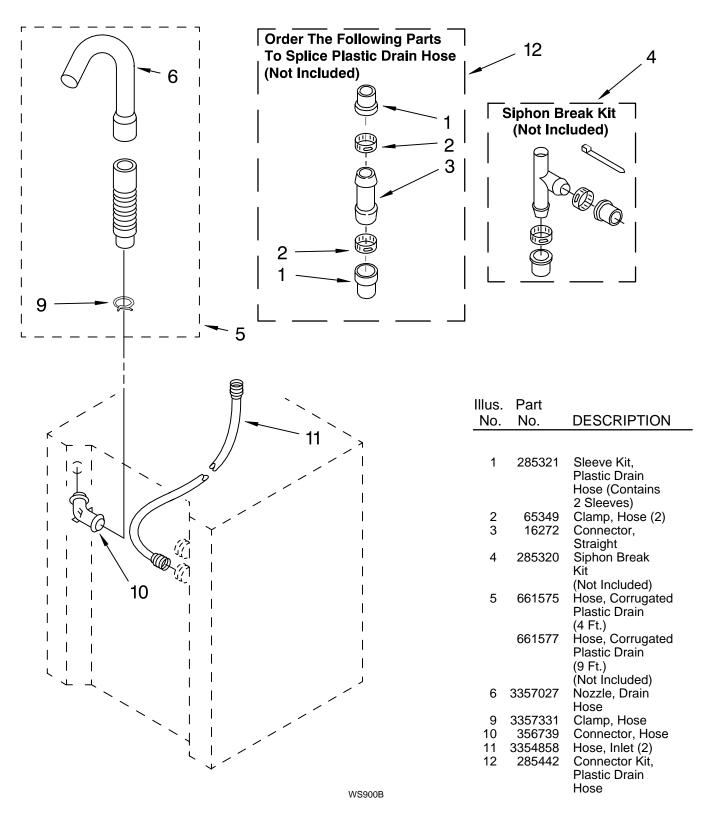


#### **GEARCASE PARTS**

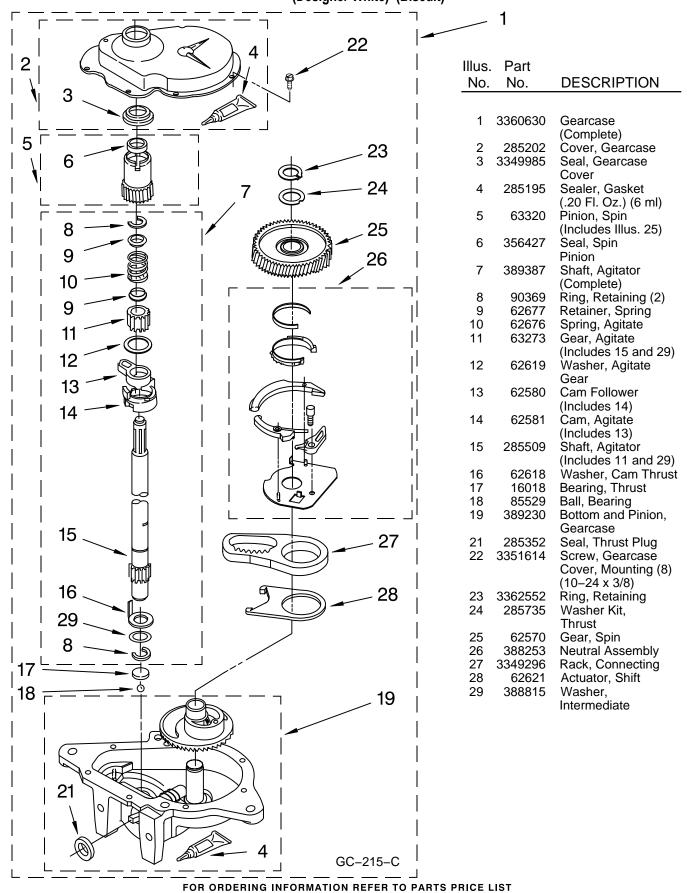

#### **BRAKE AND DRIVE TUBE PARTS**

For Models: LTG5243DQ3, LTG5243DT3
\_\_\_\_\_(Designer White) (Biscuit)

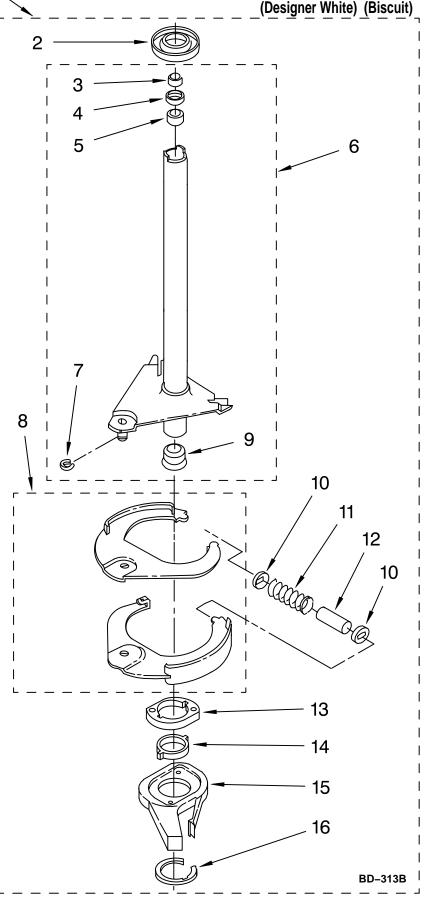


1

Illus.	Part	
No.	No.	DESCRIPTION
1	387948	Brake And Drive Tube (Complete)
2 3 4 5	62658 91939 356427 356937	Ring, Thrust Seal, Oil Seal, Drive Tube Spacer,
6	64027	Drive Tube Tube, Basket Drive (Includes Illus.
7 8 9	64035 64232 62703	3, 4, 5 & 9) Ring, Retaining Brake Shoe "T" Bearing,
10	62648	Spin Tube Cap, Brake Spring (2)
11 12	63748 62909	Spring (E) Spring, Brake Sleeve, Brake Spring
13	661516	Cam, Brake Release 63023 (Alt.) 3348288 (Alt.)
14 15	63022 64194	Sleeve, Cam Driver, Brake Cam
16	90368	Ring, Retaining

# PRODUCT ACCESSORY PARTS For Models: LTG5243DQ3, LTG5243DT3


(Designer White) (Biscuit)

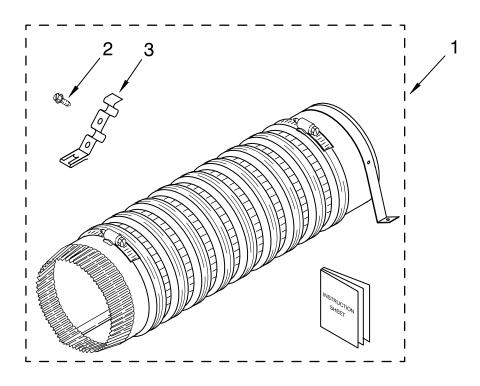

Illus. No.		Part No.	DESCRIPTION					
	1	279823	Side Exhaust					
			Extension Kit					
			(Complete)					
	2	488729	Screw					
	3	3395536	Clip					

#### **MISCELLANEOUS PARTS**

For Models: LTG5243DQ3, LTG5243DT3 (Designer White) (Biscuit)

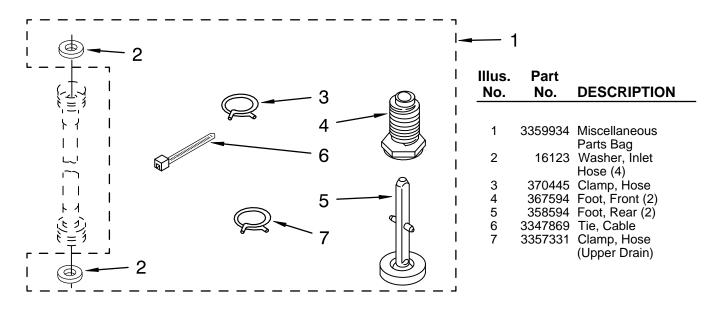

### **OPTIONAL PARTS (NOT INCLUDED)**


Illus. Part No. No. DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
PAINT, TOUCH-UP (1/2oz.)	ACC	ESSOR	Y PARTS	LUBI	RICANT	
72017 White 4392899 Biscuit PAINT, PRESSURIZED SPRAY			Plug, Dryer Side Panel ) White 4 Biscuit		285208	Lubricant (Use Only in Brake Shoe Assembly On Roller and
(12 oz.)	OIL					Pin)
350938 Primer, Gray 350930 White 4392901 Biscuit PAINT, BULK (1 qt.) 799344 White (Uncut)		350572	2 Oil, Gearcase (16 Oz.)	SEAI		Sealer, Gasket (.20 Fl. Oz.) (6 ml)

4392900 Biscuit (Uncut)

### 3402856 BURNER ASSEMBLY

For Models: LTG5243DQ3, LTG5243DT3 (Designer White) (Biscuit)

USE WITH TYPE 1 – NATURAL, TYPE 2 – MIXED, TYPE 3 – MANUFACTURED AND TYPE 4 – LIQUEFIED PROPANE AND BUTANE GASES

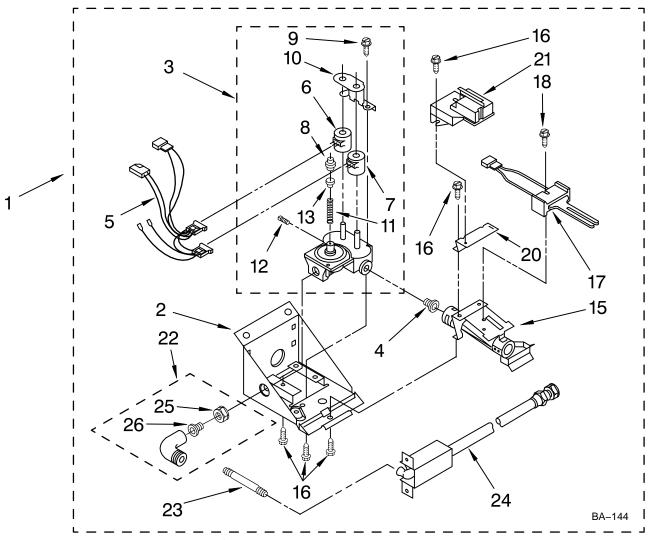

Illus.	Part		Illus.	Part		Illus.	Part	
No.	No.	DESCRIPTION	No.	No.	DESCRIPTION	No.	No.	DESCRIPTION
1	3402856	Burner Assembly 60 Hz.	9	694421	Screw, 8-32	22 23	3406051 3388638	Elbow Union Assembly Nipple, Short
2	697408	Base, Burner	10	694538	Bracket, Shunt	24	3391118	Supply Line
3	3401777	Valve, 60 Hz.	11	694422	Spring, Regulator			(Gas)
4		Orifice	12	239822	Pipe, Plug	25	233076	Nut
	234822	Natural Gas	13	694423	Screw	26	3393767	Pipe
	347743	L.P. Gas	15	3392268	Burner			
5	3401849	Harness	16	3387057	Screw, 8-18 X 3/8	Fol	lowing Pa	arts Not Illustrated
6	694539	Coil, 60 Hz.	17	686590	Ignitor			
		(Split)	18	3393909	Screw and Washer		49573	Conversion Kit
7	694540	Coil, 60 Hz.			8–32 x 1		45070	(Type 1, 2 & 3)
8	694424	Leak Limiter	20	697409	Bracket, Sensor			to Type (4) L.P.G.
			21	338906	Sensor, Radiant			to Type (4) E.I .O.
					,			
						•		